

142300 to 142457

Illustrated Parts List

MODEL SERIES

142300 to 142457

TYPE NUMBERS

0010 to 0076
0110 to 0319
502000 to 502139


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW.

- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 502138 are listed complete. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.




142300 to 142457

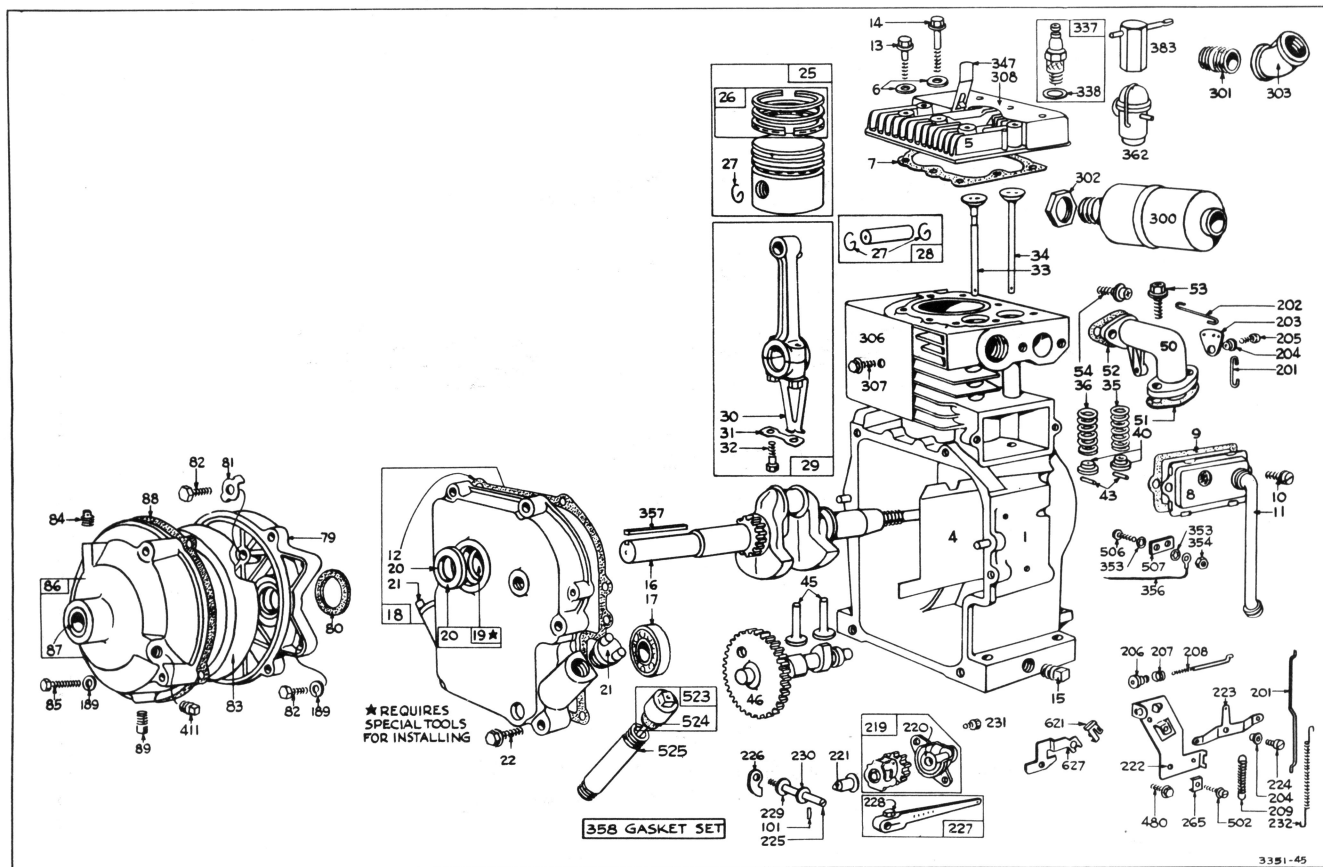


CYLINDER, PISTON, CONNECTING ROD AND CRANKSHAFT PARTS

Assemblies include all parts shown in frames.

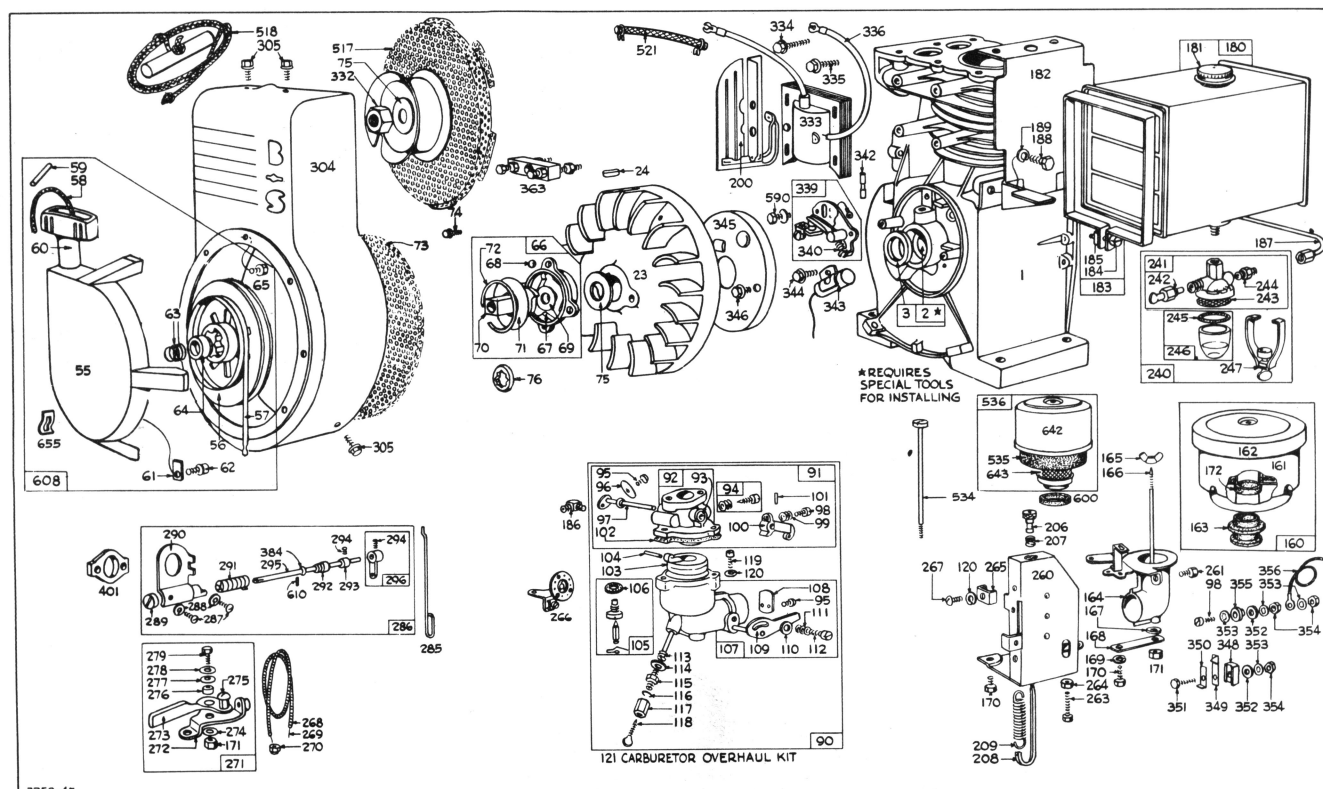


FUEL SYSTEM, MAGNETO AND BLOWER HOUSING PARTS

Assemblies include all parts shown in frames.

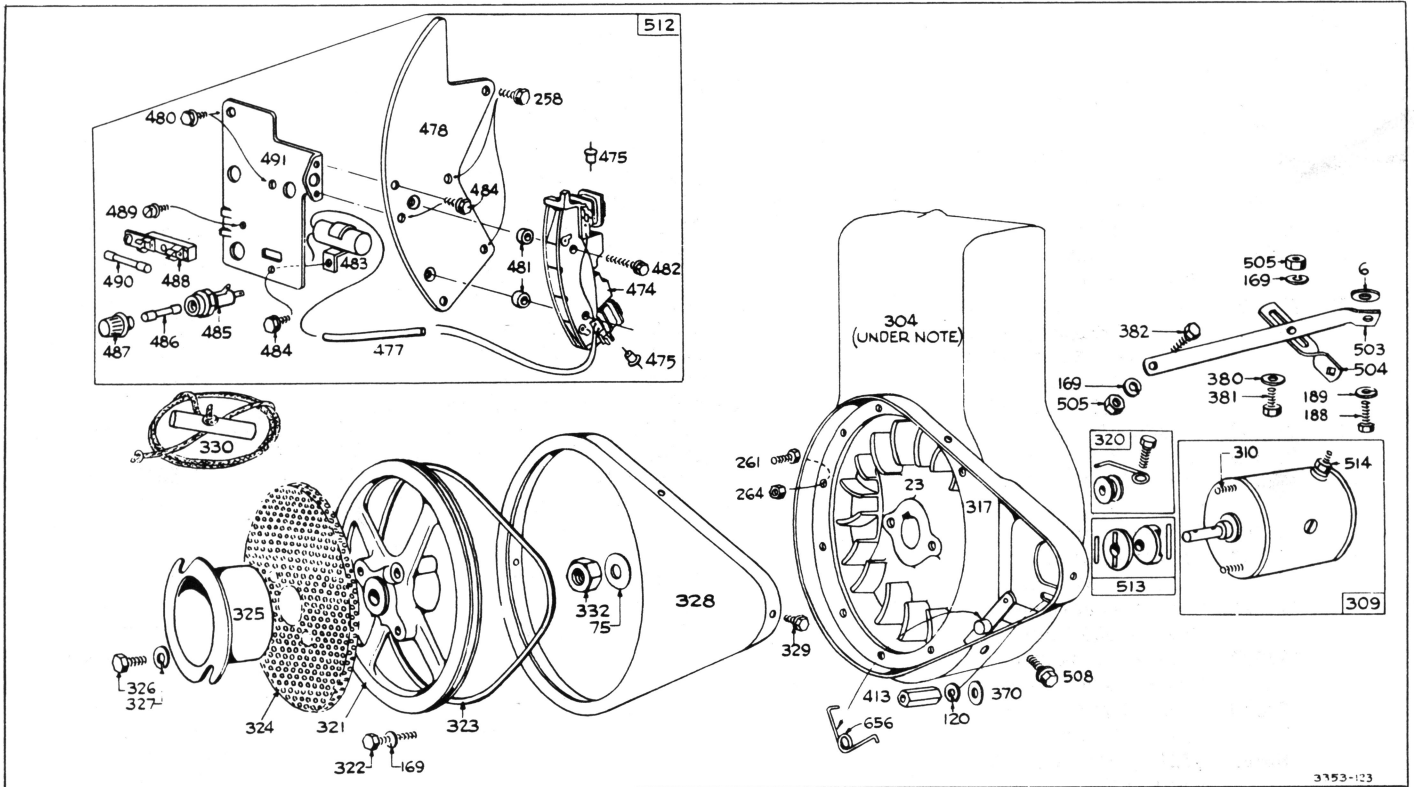

STARTER PARTS

Assemblies include all parts shown in frames.

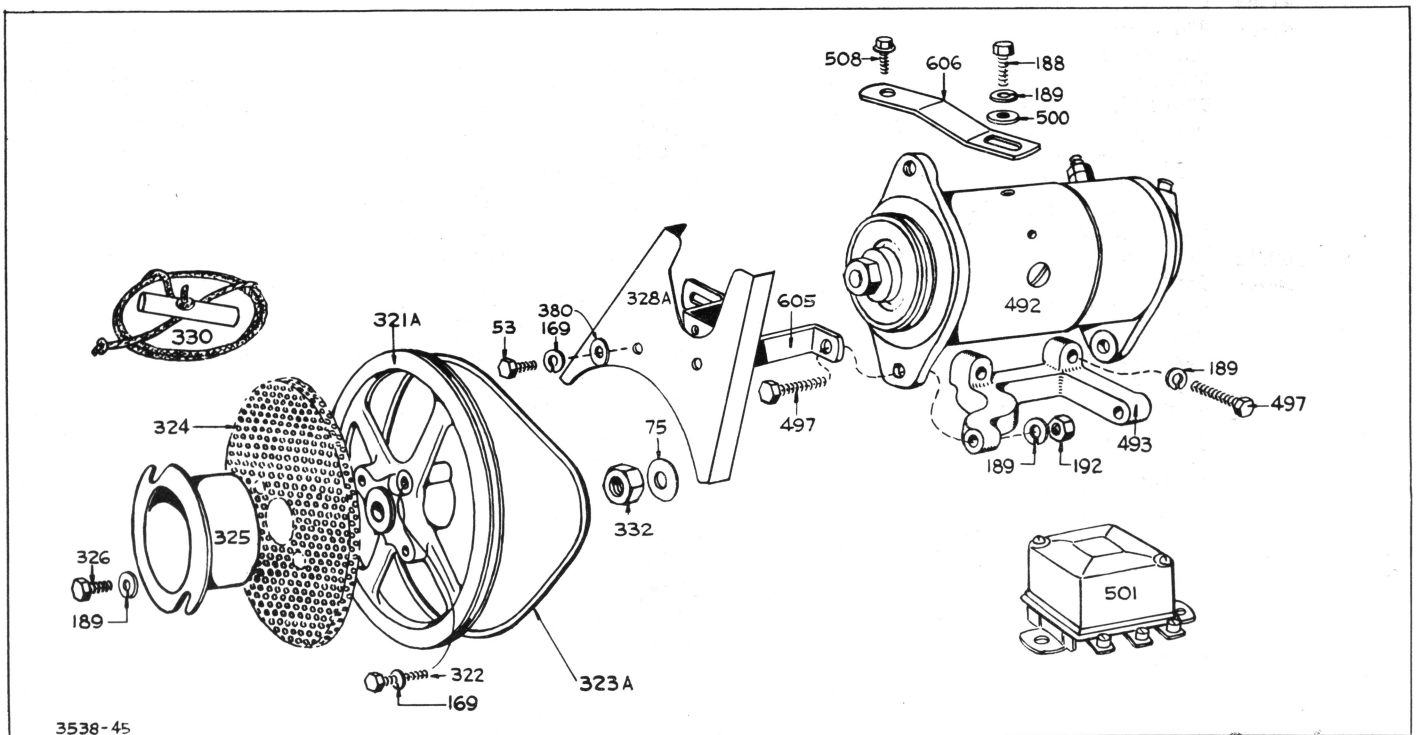

STARTER PARTS

Assemblies include all parts shown in frames.

142300 to 142457

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	299166	Cylinder Assembly			0132, 0136, 0140, 0144,			502058, 502059, 502099,
2	295962	Bushing—Cylinder			0151, 0176, 0189, 0193,			502134.
	Note:	Requires special tools for installation.			0222, 0238, 0240, 0245,			260609 Crankshaft
3	294606	Seal—Oil			0260, 0261, 0263, 0265,			Used on type Nos.
4	221001	Plate—Cylinder Baffle			0267, 0269, 0277, 0287,			0131, 502097, 502124.
5	210578	Head—Cylinder			0290, 0298, 0301,			260663 Crankshaft
6	22963	Washer—Plain			0303, 0304,			Used on type No. 0191.
7	*270340	Gasket—Cylinder Head			502020, 502021, 502022,			260667 Crankshaft
	Note:	Two No. 270340 Cylinder Head Gaskets are used on type Nos. 0203, 0274, 502131, 502132.			502023, 502024, 502030,			Used on type Nos.
8	294948	Breather Assembly			502032, 502045, 502052,			0236, 0283,
9	*27803	Gasket—Valve Cover			502055, 502067, 502073,			502109, 502110, 502135.
10	93394	Screw—Breather Mtg. Sem			502081, 502082, 502092,			260865 Crankshaft
11	67068	Tube—Breather			502105, 502116, 502117,			Used on type No. 0314.
12	*27750	Gasket—Crankcase Cover—1/64" thick			502130.			17 29530
	*27876	Gasket—Crankcase Cover—.005" thick			260423 Crankshaft			18 295868
	*27877	Gasket—Crankcase Cover—.009" thick			Used on type Nos.			Note:
13	93210	Screw—Cylinder Head (2-9/32" long)			0036, 0184, 0306, 0310,			295872 Cover Assembly—
	Note:	93211 Screw—Cylinder Head (2-21/32" long) Used on type No. 502129 where tank bracket mounts to Cylinder Head.			502029, 502050, 502060,			Crankcase
14	93211	Screw—Cylinder Head (2-9/16" long)			502123.			Used on type Nos.
15	91084	Plug—Oil Drain			260425 Crankshaft			0139, 0312, 502129.
	Note:	92814 Plug—Oil Drain Used on type No. 502125.			Used on type Nos. 0035,			295876 Cover Assembly—
		93418 Plug—Oil Drain Used on type Nos. 0152, 0153, 0155, 0205, 0206, 0207, 0216, 0217, 0218, 0223, 0224, 0241, 0249, 0300, 502099.			0071, 0125, 0126, 0137,			Crankcase
16	260315	Crankshaft			0138, 0150, 0156, 0157,			Used on type Nos.
	Note:	260358 Crankshaft Used on type Nos. 0037, 0055, 0115, 0116, 0117, 0127, 0128, 0143, 0194, 0232, 0255, 0293, 0311, 502015, 502016, 502017, 502018, 502019, 502026, 502037, 502038, 502051.			0173, 0174, 0183, 0185,			0010, 0015, 0016, 0135,
		260359 Crankshaft Used on type Nos. 0070, 0195, 0225, 0229, 0233, 0253, 0254, 0268, 0282, 0299,			0186, 0188, 0190, 0192,			0145, 0171, 0205, 0206,
		502031, 502042, 502053, 502096, 502104, 502106.			0196, 0203, 0214, 0220,			0207, 0216, 0217, 0218,
		260389 Crankshaft Used on type Nos. 0049, 0075, 0120, 0121,			0228, 0230, 0231, 0234,			0223, 0224, 0241, 0248,
					0235, 0237, 0243, 0244,			0249, 0300, 0318,
					0246, 0247, 0251, 0264,			502039, 502040, 502046,
					0274, 0275, 0276, 0280,			502047, 502048, 502099,
					0284, 0286, 0291, 0302,			502111, 502134.
					0307, 0309, 0317,			295958 Cover Assembly—
					502035, 502043, 502049,			Crankcase
					502054, 502061, 502062,			Used on type Nos.
					502070, 502071, 502076,			0035, 0036, 0037, 0070,
					502080, 502083, 502084,			0071, 0115, 0116, 0117,
					502086, 502089, 502091,			0127, 0128, 0137, 0138,
					502093, 502103, 502119,			0143, 0150, 0173, 0174,
					502131, 502132, 502136,			0182, 0183, 0184, 0185,
					502137, 502138.			0186, 0188, 0190, 0191,
					260472 Crankshaft			0192, 0195, 0196, 0200,
					Used on type Nos.			0201, 0203, 0220, 0225,
					0129, 0141, 0172, 0175,			0226, 0228, 0229, 0230,
					0182, 0187, 0200, 0202,			0231, 0232, 0233, 0234,
					0204, 0212, 0213, 0262,			0235, 0237, 0243, 0244,
					0279, 0305,			0246, 0247, 0253, 0254,
					502028, 502033, 502036,			0264, 0268, 0274, 0275,
					502041, 502068, 502090,			0276, 0280, 0282, 0284,
					502100, 502101, 502102,			0286, 0291, 0293, 0299,
					502108, 502114, 502127.			0302, 0305, 0306, 0307,
					260498 Crankshaft			0309, 0310, 0311, 0314,
					Used on type Nos.			0317, 502015,
					0201, 0226, 502088.			502016, 502017, 502018,
					260586 Crankshaft			502019, 502026, 502029,
					Used on type Nos.			502031, 502033, 502037,
					0145, 0266, 502039.			502042, 502043, 502049,
					260607 Crankshaft			502050, 502051, 502053,
					Used on type Nos.			502054, 502060, 502061,
					0169, 0171, 0205, 0206,			502062, 502063, 502068,
					0207, 0208, 0209, 0216,			502070, 502076, 502080,
					0217, 0218, 0248, 0259,			502084, 502086, 502088,
					0270, 0271, 0292, 0300,			502089, 502093, 502096,
					0312, 0315, 0318,			502102, 502103, 502104,
								502106, 502108, 502119,

* Included in Gasket Set—Part No. 295970.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		502123, 502131, 502132, 502136, 502137, 502138. 296075 Cover Assembly—Crankcase Used on type Nos. 0049, 0075, 0120, 0121, 0132, 0136, 0140, 0144, 0151, 0176, 0189, 0193, 0222, 0238, 0240, 0245, 0260, 0261, 0263, 0265, 0267, 0269, 0277, 0287, 0290, 0298, 0301, 0303, 0304, 502020, 502021, 502022, 502023, 502024, 502030, 502032, 502045, 502052, 502055, 502067, 502073, 502081, 502082, 502090, 502092, 502105, 502116, 502117, 502130. 296184 Cover Assembly—Crankcase Used on type Nos. 0125, 0126, 0129, 0141, 0156, 0157, 0172, 0187, 0202, 0212, 0213, 0214, 0236, 0251, 0262, 502028, 502035, 502036, 502041, 502071, 502083, 502091, 502100, 502101, 502114, 502127. 297407 Cover Assembly—Crankcase Used on type Nos. 0131, 0279, 502097, 502124. 297533 Cover Assembly—Crankcase Used on type Nos. 0055, 0255, 0283. 298129 Cover Assembly—Crankcase Used on type Nos. 0130, 502107.	25	297692	Piston Assembly—Std.			Piston, Oil, .020" O. S.
				297693	Piston Assembly— .010" O. S.			
				297694	Piston Assembly— .020" O. S.	297707		Ring Set—Piston— .030" O. S. Consists of: 211243 Ring— Piston, Comp., Top, .030" O. S. 211246 Ring— Piston, Comp., Center, .030" O. S. 211249 Ring— Piston, Oil, .030" O. S.
				297695	Piston Assembly— .030" O. S.			
		PISTON RING SETS:						
		Note: For Chrome Piston Ring Set — standard size — order Part No. 298745.						
			26	297815	Ring Set—Piston—Std. Consists of: 210600 Ring— Piston, Comp., Top, Std. 211037 Ring— Piston, Comp., Center, Standard 210602 Ring— Piston, Oil, Std.	27	68546	Lock—Piston Pin
				297705	Ring Set—Piston— .010" O. S. Consists of: 211241 Ring— Piston, Comp., Top, .010" O. S. 211244 Ring— Piston, Comp., Center, .010" O. S. 211247 Ring— Piston, Oil, .010" O. S.	28	295840	Pin Assembly—Standard
							295841	Pin Assy.—.005" O. S.
						29	295838	Rod Assy.—Connecting
						30	220837	Dipper—Connecting Rod
						31	220811	Lock—Conn. Rod Screw
						32	92659	Screw—Connecting Rod
						33	230385	Valve—Exhaust
							Note:	260444 Valve—Exhaust Used on type Nos. 0191, 0193, 0195, 0226, 0229, 0240, 0243, 0244, 0246, 0247, 0261, 0268, 0269, 0282, 0287, 0293, 0306, 0310, 0316, 0317, 502031, 502033, 502042, 502060, 502088, 502104, 502106, 502136, 502137.
19	295964	Bushing — Crankcase Cover Note: Requires special tools for installation.				34	230386	Valve—Intake
20	298423	Seal—Oil					Note:	230385 Valve—Intake Used on type Nos. 0191, 0193, 0195, 0226, 0229, 0240, 0243, 0244, 0246, 0247, 0261, 0268, 0269, 0282, 0287, 0293, 0306, 0310, 0316, 0317, 502031, 502033, 502042, 502060, 502088, 502104, 502106, 502136, 502137.
21	66768	Plug—Oil Filler Note: 298859 Oil Minder Used on type No. 0180. 298860 Oil Minder Used on type No. 0191.	297706		Ring Set—Piston— .020" O. S. Consists of: 211242 Ring— Piston, Comp., Top, .020" O. S. 211245 Ring— Piston, Comp., Center, .020" O. S. 211248 Ring—	35	65906	Spring—Intake Valve
22	93205	Screw—Crankcase Cover Mounting Sem				36	65906	Spring—Exhaust Valve
23	295214	Flywheel Note: 296335 Flywheel—Magnet Used on type Nos. 0114, 0129, 0207, 0208, 0217, 0248, 0260, 502014, 502019, 502024, 502101.					Note:	26828 Spring—Exhaust Valve Used on type Nos. 0191, 0193, 0195, 0226, 0229, 0240, 0243, 0244, 0246, 0247, 0261, 0268, 0269, 0282, 0287, 0293, 0306, 0310, 0316, 0317, 502031, 502033, 502042, 502060, 502088, 502104, 502106, 502136, 502137.
24	61760	Key—Flywheel						

* Included in Gasket Set—Part No. 295970.

142300 to 142457

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
40	230477	Retainer—Valve Spring	61	66918	Bumper—Starter Pulley			502036, 502038, 502064,
	Note:	292260 Rotocap—Exhaust Valve	62	93254	Screw—Pulley Bumper Mounting Sem			502090, 502094, 502114,
		Used on type Nos. 0191, 0193, 0195, 0226, 0229, 0240, 0243, 0244, 0246, 0247, 0261, 0268, 0269, 0282, 0287, 0293, 0306, 0310, 0316, 0317, 502031, 502033, 502042, 502060, 502088, 502104, 502106, 502136, 502137.	63	260414	Spring—Ratchet	79	296179	Case Assembly—Gear
43	230476	Pin—Valve Spring Ret.	64	230543	Adapter—Ratchet Spring	80	27884	Gasket—Gear Case to Crankcase Cover
	Note:	230570 Pin—Ex. Valve Rotocap Retainer	65	93163	Screw—Rewind Starter Housing Mounting Sem	81	220234	Lock—Gear Case Mounting Screw
		230569 Retainer—Exhaust Valve Rotocap		Note:	230796 Nut—Starter Mounting (4)	82	92502	Screw—Cap
		Used on type Nos. 0191, 0193, 0195, 0226, 0229, 0240, 0243, 0246, 0247, 0261, 0268, 0269, 0282, 0287, 0293, 0306, 0310, 0316, 0317, 502031, 502033, 502042, 502060, 502088, 502104, 502106, 502136, 502137.	66	295684	93420 Screw—Starter Mounting (4)	83	296052	Shaft Assembly—Drive
45	260125	Tappet—Valve			92290 Washer—Lock (4)		Note:	296298 Shaft Assy.—Drive
46	210728	Gear—Cam			90289 Nut—Square (4)			Used on type Nos. 0140, 0176, 0290, 502116.
50	210705	Elbow—Intake			Used on type Nos. 0055, 0145, 0255, 0266.	84	92617	Plug—Breather
51	†*65647	Gasket—Intake Elbow			Clutch Assy.—Rewind Starter	85	91386	Screw—Gear Case Cover Mounting
52	*27828	Gasket—Intake Elbow Mtg.		Note:	298339 Clutch Assy.—Rewind Starter	86	296053	Cover Assy.—Gear Case
53	93357	Screw—Sem			Used on type Nos. 0055, 0145, 0255, 0266.	87	298423	Seal—Oil
	Note:	93158 Screw—Sem	67	210400	Housing—Rewind Starter Clutch	88	27328	Gasket—Gear Case Cover
		Used to mount Belt Guard to Bracket on type Nos. 0131, 0141, 0143, 0153, 0182, 0204, 0213, 0214, 0224, 0236, 0243, 0244, 0249, 0257, 0258, 0297, 0302, 502068, 502095, 502097, 502102, 502109, 502120, 502124.		Note:	211373 Housing—Rewind Starter Clutch	89	91488	Plug—Oil Drain
54	93208	Screw—Intake Elbow Mounting Sem			Used on type Nos. 0055, 0145, 0255, 0266.	90	295857	Carburetor Assembly (Manual Choke)
	Note:	92683 Screw—Intake Elbow Mounting Sem	68	63770	Ball—Clutch			Carburetor No. 295857 is used on Model 142300 Series engines except as follows:
		Used on type Nos. 0253, 502033.	69	66718	Washer—Starter Clutch, Thrust		Note:	295942 Carburetor Assy. (Choke-A-Matic)
55	295272	Housing—Rewind Starter	70	296916	Ratchet—Rewind Starter Clutch			Used on type Nos. 0146, 0159, 0178, 0250, 0257, 0292, 502047, 502056, 502057, 502064, 502090, 502094, 502095, 502109, 502110, 502121.
	Note:	298402 Housing—Rewind Starter	71	221301	Washer—Retainer (with flange)			296090 Carburetor Assy. (Mechanical Governor—Manual Choke)
		Used on type Nos. 0055, 0145, 0255, 0266.		Note:	220575 Washer—Retainer			(Used on Model 142400 Series)
56	295871	Pulley—Rewind Starter	72	26032	Ring—Clutch Retainer			296557 Carburetor Assy. (Kerosene)
57	294303	Spring—Rewind Starter	73	220823	Screen—Rewind Starter			Used on type Nos. 0203, 0274, 502131, 502132.
58	66564	Rope—Rewind Starter (63" long)		Note:	221668 Screen—Rewind Starter			297469 Carburetor Assy. Automatic Choke—Mechanical Governor
	Note:	If longer rope is needed, order No. 66574 and cut to required length.			Used on type Nos. 0055, 0145, 0255, 0266.			Used on type No. 0253.
59	230228	Pin—Starter Grip	75	220865	Washer—Spring			297470 Carburetor Assy. (Automatic Choke—Mechanical Governor)
60	66728	Grip—Starter Rope	76	66688	Washer—Ratchet Sealing (Used with 7 point shank ratchet).			Used on type No. 502033.
				Note:	270045 Washer—Ratchet Sealing			297684 Carburetor Assy. (L. P. Gas)
					260517 Spring—Ratchet Sealing Washer			Used on type Nos. 0244, 502136.
					Used on type Nos. 0055, 0133, 0142, 0152, 0154, 0155, 0158, 0176, 0178, 0194, 0202, 0210, 0216, 0255, 0262, 502028,	91	295859	Body Assembly—Upper Carburetor (Used on Model 142300 Series).
							Note:	296089 Body Assembly—Upper Carburetor

† Included in Gasket Set—Part No. 295970.

† Included in Carburetor Overhaul Kit—Part No. 295938.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		(Used on Model 142400 Series).			Used on type Nos. 0253, 502033.		Note:	296319 Cleaner Assy. — Air (United Specialties Label) Used on type No. 502030.
		297683 Body Assembly—Upper Carburetor	108	62872	Valve—Choke	161	296704	Bowl—Air Cleaner
		Used on type Nos. 0244, 502136.	Note:	Note:	22954 Valve—Choke	162	296270	Cover and Filter — Air Cleaner
92	295858	Body—Upper Carburetor			Used on type Nos. 0253, 502033.	163	*27907	Gasket—Air Cleaner Mtg. For Oil Bath and Rectangular Foam Type Air Cleaners.
	Note:	296725 Body—Upper Carburetor	109	295374	Shaft and Lever—Choke	164	298595	Pipe Assy.—Air Cleaner (For Round Foam Type Air Cleaner) Used after Serial No. 423825 on Model 143300 Series engines except those with Speed Control Housing (Ref. No. 260).
		Used on type Nos. 0244, 502136.	Note:	Note:	295372 Shaft Assembly—Choke (Choke-A-Matic)			Note:
93	23108	Bushing—Throttle Shaft			Used on type Nos. 0146, 0159, 0178, 0250, 0257, 0292, 502047, 502056, 502057, 502064, 502090, 502094, 502095, 502109, 502110, 502121.			295378 Pipe Assy.—Air Cleaner (For Oil Bath and Rectangular Foam Type) (Used before Serial No. 423826 only on Model 142300 Series except those with Speed Control Housing (Ref. No. 260).
94	†292681	Valve Assembly—Carburetor Idle			296847 Shaft, Lever and Vane Assembly—Automatic Choke	298410		Pipe Assembly—Air Cleaner (For Round Foam Type Air Cleaner) Used after Serial No. 423825 on Model 1424 Series engines; also used on Model 1423 Series engines with Speed Control Housing (Ref. No. 260); except type Nos. 0139, 0154, 0158, 0176, 0202, 0236, which use Part No. 295593.
95	93038	Screw—Throttle and Choke Valve Mtg. Sem			Uses: 291040 Lever and Weight Assembly			Note:
96	62940	Valve—Throttle			Includes: 90200 Screw (for mounting)			295593 Pipe Assembly—Air Cleaner (For Round Oil Bath or Rectangular Foam Type Air Cleaners) Used before Serial No. 423826 on Model 142400 Series engines; also on Model 142300 Series engines using a Speed Control Housing—(See Ref. No. 260) and on all type Nos. 0139, 0154, 0158, 0176, 0202, 0236.
97	295294	Shaft and Lever—Throttle (Used on Model 142300 Series).	110	62899	Used on type Nos. 0253, 502033.			
	Note:	296293 Shaft and Lever—Throttle (Used on Model 142400 Series).	111	26155	Washer—Choke Lever			
98	91920	Screw—Machine, Fil. Hd.—8-32 x 5/8"	Note:	Note:	260368 Spring—Choke Return (Choke-A-Matic)			
99	26157	Spring—Throttle Adjustment			Used on type Nos. 0146, 0159, 0178, 0250, 0257, 0292, 502047, 502056, 502057, 502064, 502090, 502094, 502095, 502109, 502110, 502121.			
100	295804	Stop—Throttle (Used on Model 142300 Series).	112	23123	Screw—Choke Lever			
	Note:	61967 Stop—Throttle (Used on Model 142400 Series).	113	†296286	Nozzle—Carburetor			
101	93043	Pin—Throttle Stop and Governor Shaft	Note:	Note:	296619 Nozzle—Carb.			
102	†27918	Gasket—Carburetor Body			Used on type Nos. 0070, 0127, 0128, 0185, 0186, 0195, 0225, 0229, 0233, 0247, 0253, 0254, 0262, 0268, 0282, 0299, 502026, 502031, 502037, 502042, 502053, 502061, 502062, 502096, 502104.			
103	99333	Float—Carburetor	114	†68667	Gasket—Nozzle			
104	†423114	Pin—Float Hinge	115	†23117	Retainer—Needle Valve			
105	†293962	Valve and Seat—Fuel Inlet	Note:	Note:	292226 Retainer Assy.—Jet Needle			
	Note:	297102 Valve and Seat—Fuel Inlet Used on type No. 502033.			Used on type Nos. 0203, 0274, 502131, 502132.			
106	27639	Gasket—Fuel Inlet Valve Seat	116	†68677	Packing—Needle Valve			
107	295860	Body Assembly—Lower Carburetor	117	†23118	Nut—Needle Valve Pkng.			
	Note:	295883 Body Assembly—Lower Carburetor (Choke-A-Matic) Used on type Nos. 0146, 0159, 0178, 0250, 0257, 0292, 502047, 502056, 502057, 502064, 502090, 502094, 502095, 502109, 502110, 502121.	118	†230009	Valve—Needle			
		296727 Body Assembly—Lower Carburetor	Note:	Note:	230085 Valve—Needle			
		Used on type Nos. 0244, 502136.			Used on type Nos. 0203, 0274, 502131, 502132.			
		297496 Body Assembly—Lower Carburetor	119	90746	Screw—Machine, Fil. Hd.—10-32 x 5/8"			
			120	92290	Washer—Lock—No. 10 x 1/16" x 3/64"			
			121	295938	Carburetor Overhaul Kit			
			160	296434	Cleaner Assembly—Air	165	93453	Nut—Wing
						Note:	Note:	92067 Nut—Wing

* Included in Gasket Set—Part No. 295970.

♦ Included in Carburetor Overhaul Kit—Part No. 291691.

† Included in Carburetor Overhaul Kit—Part No. 295938.

142300 to 142457

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used before Serial No. 423826 on type Nos. 0146, 0169, 0179, 0180, 0194, 0208, 0209, 0216, 0219, 0226, 0239, 0248, 502034, 502038, 502058, 502059, 502066, 502088, 502115, 502128, 502134.			Used on type Nos. 0203, 0274, 502131, 502132.	187	294965	Pipe—Fuel (Used on Model 142300 Series).
166	230633	Stud—Air Cleaner (8-13/32" long)			297865 Tank Assy.—Fuel (4 quart)		Note:	29025 Pipe—Fuel Used on type Nos. 0205, 0217, 0218, 502099.
	Note:	230639 Stud—Air Cleaner (9-29/32" long)	181	69221	Cap—Fuel Tank			295050 Pipe—Fuel Used on type No. 0176.
		Used on type Nos. 0202, 502028, 502036.		Note:	297866 Cap—Fuel Tank			295690 Pipe—Fuel Used on Model 143400 Series and on type Nos. 0010, 0015, 0016, 0035, 0036, 0037, 0049, 0055, 0070, 0071, 0075, 0115, 0116, 0120, 0121, 0125, 0126, 0127, 0128, 0132, 0135, 0136, 0137, 0138, 0139, 0140, 0144, 0145, 0146, 0149, 0150, 0151, 0155, 0156, 0157, 0169, 0172, 0173, 0174, 0175, 0180, 0183, 0184, 0185, 0187, 0188, 0189, 0190, 0191, 0192, 0193, 0194, 0195, 0196, 0199, 0200, 0201, 0202, 0212, 0222, 0225, 0226, 0228, 0229, 0230, 0231, 0232, 0233, 0235, 0237, 0238, 0239, 0240, 0245, 0247, 0251, 0253, 0254, 0255, 0256, 0260, 0261, 0263, 0264, 0265, 0267, 0268, 0269, 0271, 0275, 0276, 0277, 0278, 0279, 0280, 0281, 0282, 0283, 0286, 0287, 0292, 0293, 0298, 0299, 0301, 0303, 0304, 0305, 0306, 0307, 0309, 0310, 0311, 0314, 0317, 502015, 502016, 502020, 502021, 502029, 502038, 502039, 502040, 502043, 502045, 502046, 502047, 502048, 502049, 502050, 502051, 502052, 502058, 502059, 502060, 502063, 502067, 502069, 502070, 502072, 502073, 502076, 502080, 502081, 502082, 502086, 502089, 502092, 502105, 502108, 502116, 502117, 502119, 502123, 502125, 502128, 502129, 502130, 502135.
		230696 Stud—Air Cleaner (5-7/8" long)	182	220858	Bracket—Fuel Tank			296004 Pipe—Fuel (Flexible)
		Used to mount Rectangular Air Cleaner before Serial No. 423826 on type Nos. 0146, 0169, 0179, 0180, 0194, 0208, 0209, 0216, 0219, 0226, 0239, 0248, 502034, 502038, 502058, 502059, 502066, 502088, 502115, 502128, 502134.		Note:	296511 Brkt.—Fuel Tank			Uses: 93053 Clamps Used on type Nos. 0131, 0141, 0143, 0153, 0158, 0170, 0176, 0182, 0186, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0234, 0236, 0241, 0246, 0248, 0249, 0257, 0258, 0266, 0284, 0290, 0291, 0296, 0297, 0302, 0312, 502033, 502056, 502057, 502062, 502074, 502075, 502085, 502126.
167	66648	Gasket—Air Cleaner Stud	183	291367	Strap Assy.—Fuel Tank			67218 Connector—Fuel Pipe (Plastic)
168	22832	Strap—Air Cleaner Pipe		Note:	291490 Strap Assembly—Fuel Tank			Used on type Nos. 0131, 0141, 0142, 0143, 0153, 0158, 0170, 0176, 0182, 0186, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0234, 0236, 0241, 0246, 0248, 0249, 0257, 0258, 0266, 0284, 0290, 0291, 0296, 0297, 0302, 0312, 502033, 502056, 502057, 502062, 502074, 502075, 502085, 502126.
169	90832	Washer—Lock, 1/4" x 3/32" x 5/64"			Used on type Nos. 0055, 0138, 0146, 0149, 0151, 0184, 0194, 0201, 0203, 0222, 0226, 0239, 0251, 0255, 0256, 0283, 0298, 0306, 502038, 502060, 502063, 502067, 502072, 502073, 502088, 502089, 502096, 502117, 502123, 502128, 502131, 502132, 502138.			67218 Connector—Fuel Pipe (Plastic)
170	91468	Screw—Cap, Hex. Hd.—1/4-20 x 3/8"	184	91257	Screw—Machine, Fil. Hd.—1/4-20 x 1-1/2"			(between filter and pipe)
171	92129	Nut—Hex.—1/4-28	185	90970	Nut—Square—1/4-20			92800 Connector—Filter (Brass)
172	27906	Gasket—Air Cleaner	186	63377	Connector—Fuel Pipe			(between carb. and filter)
180	290816	Tank Assy.—Fuel (4 quart)		Note:	67218 Connector—Fuel Pipe (Plastic)			Used on type Nos. 502068, 502095, 502097, 502102, 502109, 502120, 502124.
	Note:	291488 Tank Assembly—Fuel (6 quart)			Used on type Nos. 0131, 0141, 0142, 0143, 0153, 0158, 0170, 0176, 0182, 0186, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0234, 0236, 0241, 0246, 0248, 0249, 0257, 0258, 0266, 0284, 0290, 0291, 0296, 0297, 0302, 0312, 502033, 502056, 502057, 502062, 502074, 502075, 502085, 502126.			
		Uses: 22907 Support—Upper Fuel Tank						
		Used on type Nos. 0055, 0138, 0146, 0149, 0151, 0184, 0194, 0201, 0222, 0226, 0239, 0251, 0255, 0256, 0283, 0298, 0306, 0317, 502038, 502060, 502063, 502067, 502072, 502073, 502088, 502089, 502096, 502117, 502123, 502128, 502138.						
		291513 Tank Assembly—Combination Fuel						
		Uses: 22907 Support—Upper Fuel Tank						
		220863 Washer—Spacer						
		(Used between one boss on cyl. head and tank bracket)						

* Included in Gasket Set—Part No. 295970.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0290, 0291, 0296, 0297, 0302, 0312, 502056, 502057, 502068, 502074, 502075, 502085, 502095, 502097, 502102, 502109, 502120, 502124. 296225 Pipe—Fuel Used on type Nos. 0114, 0129, 502013, 502014, 502019, 502023, 502024, 502101. 296537 Pipe—Fuel (carburetor to filter) 89248 Pipe—Fuel (between filters) 92655 Tee The above fuel pipes and fitting are used on type Nos. 0203, 0274, 502131, 502132. 296633 Pipe—Fuel Used on type Nos. 0244, 502136. 297168 Pipe—Fuel Used on type No. 502018.			0172, 0187, 0188, 0192, 0201, 0202, 0226, 0236, 0247, 0251, 0254, 0255, 0261, 0262, 0275, 0302, 0305, 502028, 502032, 502036, 502041, 502054, 502055, 502071, 502084, 502088, 502091, 502093, 502097, 502100, 502101, 502103, 502114, 502127, 502138. 207 26855 Spring—Gov. Control Rod 208 230460 Rod—Governor Control (Used on Model 142300 Series only). Note: 230499 Rod—Governor Control Used on type Nos. 0010, 0016, 0035, 0049, 0307, 502046, 502048, 502049, 502052, 502068. 230559 Rod—Governor Control (Used on Model 142400 Series). 209 260321 Spring—Governor Note: 260421 Spring—Governor Used on type Nos. 0136, 0139, 0145, 0197, 0198, 0205, 0217, 0218, 0266, 0293, 0296, 0297, 0300, 0312, 0318, 502039, 502040, 502045, 502074, 502075, 502085, 502099, 502129. 260546 Spring—Mech. Governor (Used on Model 142400 Series). 219 296688 Governor Housing and Gear Assembly 220 220673 Washer—Thrust 221 230177 Cup—Governor 222 221144 Bracket—Mech. Governor 223 221145 Lever—Governor Control 224 91841 Screw—Machine, Fil. Hd. —6-32 x 1/4" 225 230526 Shaft—Governor Lever 226 220381 Follower—Gov. Crank 227 296087 Lever Assy.—Governor 228 93100 Screw—Governor Lever 229 220680 Washer—Thrust 230 22826 Washer—Spacer 231 93064 Screw—Governor Housing to Crankcase Cover Mounting Sem 232 260178 Spring—Governor Link 240 99910 Filter Assembly—Fuel Note: 293964 Filter Assy.—Fuel Used on type Nos. 0114, 0129, 502013, 502014, 502018, 502019, 502023, 502024, 502101.			295984 Filter Assy.—Fuel Uses: 91635 Nipple (To connect filter to tank) Used on type Nos. 0158, 0176, 0234, 0241, 0248, 0284, 0290, 0291. 296031 Filter Assy.—Fuel (at carburetor) Used on type Nos. 502068, 502095, 502097, 502102, 502109, 502120, 502124. 297563 Outlet—Fuel Tank (less filter) Includes: 293934 Shut-Off Valve 230318 Connector—Fuel Pipe (opposite shut-off valve) Used as a combination to replace tank outlet and fitting assembly on type Nos. 0131, 0141, 0143, 0153, 0182, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0236, 0246, 0249, 0257, 0258, 0296, 0297, 0302, 0312, 502068, 502074, 502075, 502085, 502095, 502097, 502102, 502109, 502120, 502124. 298090 Filter—Fuel (in fuel pipe) Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0236, 0246, 0249, 0257, 0258, 0296, 0297, 0302, 0312, 502074, 502075, 502085. 241 99909 Cover Assembly—Fuel Note: 21145 Cover—Fuel Filter Uses: 91635 Nipple (Between carb. elbow and filter cover) Used on type Nos. 500704, 502068, 502095, 502097, 502102, 502109, 502120, 502124. 293966 Cover Assembly—Fuel Filter Used on type Nos. 0114, 0129, 502013, 502014, 502018, 502019, 502023, 502024, 502101. 296005 Cover Assembly—Fuel Filter Used on type Nos. 0158, 0176, 0234, 0241, 0248, 0284, 0290, 0291.
188 92272		Screw—Cap, Hex. Hd. —5/16-18 x 3/4"						
189 90366		Washer—Lock, 5/16 x 1/8 x 1/16"						
192 91397		Nut—Hex. —5/16-18						
200 295844		Blade—Governor Note: 221148 Guide—Air (Used on Model 142400 Series).						
201 260120		Link—Governor (Used on Model 142300 Series). Note: 260428 Link—Governor (Used on Model 142400 Series).						
202 260383		Link—Governor (Used on Model 142300 Series).						
203 221052		Crank—Bell						
204 230117		Collar						
205 92722		Screw—Bell Crank Mtg.						
206 230533		Nut—Gov. Control Rod (Used on Model 142300 Series). Note: 230149 Nut—Governor Control Rod Used on Model 142400 Series and on type Nos. 0010, 0016, 0035, 0049, 502046, 502048, 502049, 502052, 502068. 230580 Guide—Stop 230253 Stop—Control Rod (7/8" long) 93266 Fastener Used on type Nos. 0055, 0071, 0075, 0129, 0132, 0141, 0150, 0156, 0157,						

* Included in Gasket Set—Part No. 295970.

142300 to 142457

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
242	295913	Valve—Fuel Shut-Off	268	65616	Casing—Control Wire—72" long			91464 Elbow—Muffler, 90 degree, Street
	Note:	293934 Valve—Fuel Shut-Off		Note:	If longer casing is required, specify length in inches; if shorter wire is needed, order No. 65616 and cut to required length.			Used on type Nos. 0152, 0153, 0158, 0188, 0190, 0199, 0200, 0202, 0242, 0243, 0244, 0247, 0250, 0257, 0262, 0267, 0294, 0295, 0296, 0297, 0305, 0308, 0309, 0316, 502028, 502033, 502036, 502041, 502069, 502070, 502077, 502094, 502095, 502103, 502108, 502112, 502120, 502122, 502136, 502137.
		Used with tank outlet 297563.	269	26633	Wire—Control—78" long			Housing—Blower
		(See Ref. No. 240 under note) on type Nos. 0131, 0141, 0143, 0153, 0182, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0236, 0246, 0249, 0257, 0258, 0296, 0297, 0302, 0312, 502068, 502074, 502075, 502085, 502095, 502097, 502102, 502109, 502120, 502124.		Note:	If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.	304	294605	Note: 221269 Housing—Blower
243	22547	Screen—Fuel Filter	270	63426	Locknut—Control Wire Casing			Used on type Nos. 0253, 502033.
	Note:	62876 Screen—Fuel Filter	271	290568	Lever Assy.—Control			Uses: 221264 Plate—Baffle
		Used on type Nos. 502068, 502095, 502097, 502102, 502109, 502120, 502124.	272	290584	Base—Control Wire			93166 Screw—Baffle Plate Mounting (3).
244	53029	Connector—Fuel Pipe	273	290642	Lever—Control			296012 Housing—Blower
	Note:	63377 Connector	274	91237	Washer—Lock—1/4 x 3/32 x 5/64"			When ordering this blower housing, order No. 297415 screw and nut kit also, to remount the belt guard.
		Used on type Nos. 0114, 0129, 502013, 502014, 502018, 502019, 502023, 502024, 502101.	275	92287	Screw—Machine, Rd. Hd.—10-32 x 1/4"			Used on type Nos. 502013, 502018, 502023, 502136, 502137.
		67218 Connector (plastic)	276	22834	Washer—Spacer			296454 Housing—Blower
		Used on the following type numbers when equipped with a flexible fuel pipe: 502068, 502095, 502097, 502102, 502109, 502120, 502124.	277	22368	Washer—Control Lever			When ordering this blower housing, order No. 297415 screw and nut kit also, to remount the belt guard.
		92800 Connector—Filter (2)	278	22725	Washer—Control Lever			Used on type Nos. 0114, 0129, 0207, 0208, 0217, 0248, 0260, 502014, 502019, 502024, 502101.
		Used on type No. 502018 between filter and tank.	279	92306	Screw—Cap, Hex. Hd.—1/4-28 x 5/8"			297127 Housing—Blower
		230318 Connector—Fuel Pipe (plastic)	285	260505	Link—Automatic Choke			Used on type Nos. 0139, 0191, 0197, 0198, 0293, 0296, 0312, 502074, 502075, 502085, 502129.
		Used on type Nos. 0131, 0141, 0143, 0153, 0158, 0176, 0182, 0197, 0198, 0204, 0213, 0214, 0223, 0224, 0234, 0236, 0241, 0246, 0248, 0249, 0257, 0258, 0284, 0290, 0291, 0296, 0297, 0302, 0312.	286	296838	Thermostat Assembly			297188 Housing—Blower
245	*68477	Gasket—Fuel Filter Bowl	287	90050	Screw—Machine, Rd. Hd.—6-32 x 1/4"			Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0204, 0213, 0214, 0224, 0236, 0243, 0244, 0249, 0257, 0258, 0297, 0302, 502068, 502095, 502097, 502102, 502109, 502120, 502124.
246	298683	Bowl—Fuel Filter	288	90362	Washer—Lock—No. 6 x 3/64 x 1/32"			297189 Housing—Blower
247	99665	Yoke—Fuel Filter	289	23886	Support—Thermostat Shaft (outer)			Used on type Nos. 0112, 0117, 502012, 502017, 502022, 502057.
258	93062	Screw—Sem	290	296837	Bracket and Tube			298342 Housing—Blower
260	295917	Housing—Speed Control	291	26594	Thermostat			Used on type Nos. 0055, 0145, 0255, 0266.
261	93105	Screw—Sem	292	23885	Support—Thermostat Shaft (inner)			
263	93223	Screw—Stop	293	23884	Stop—Thermostat Shaft			
264	90355	Nut—Hex.—10-32	294	92678	Screw—Set Socket Head—6-32 x 5/16"			
265	22372	Clamp—Casing	295	230624	Shaft—Thermostat			
266	291460	Control—Throttle	296	291044	Lever Assy.—Thermostat			
267	90080	Screw—Machine, Rd. Hd.—10-32 x 7/16"	300	294599	Muffler—Exhaust			
				Note:	89953 Muffler—Exhaust			
					Used on type Nos. 0196, 0242, 0247, 0258, 0275, 0302, 502077, 502105, 502112, 502119.			
					296371 Muffler—Exhaust			
					Used on type No. 0253.			
			301	91245	Nipple—Exhaust			
			302	91242	Locknut—Muffler and Elbow			
			303	91246	Elbow—Muffler—45 degree			
				Note:	91219 Elbow—Muffler, 45 degree, Street			
					Used on type Nos. 0176, 0210, 0250, 0257, 0259, 0290.			

* Included in Gasket Set—Part No. 295970.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	93158	Screw—Sem	327	93188	Washer—Lock, 5/16 x 3/32 x 5/64"			0254, 0262, 0291, 502028, 502033, 502036, 502064, 502094, 502095, 502114, 502120, 502122, 502126.
	Note:	91439 Screw—Cap, Hex. Hd. —1/4-20 x 3/8"	328	221122	Guard—Belt	363	19165	Puller—Flywheel (optional accessory)
		90832 Washer—Lock	328A	221447	Guard—Belt	370	66432	Washer—Plain
		To mount Guard to Guard Bracket on type Nos. 0131, 0141.	329	93246	Screw—Belt Guard Mounting Sem	380	62199	Washer—Plain
		93294 Screw—Blower Housing Mtg. Sem (At Bottom)	330	69932	Rope—Starter		Note:	91324 Washer—Plain Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0204, 0213, 0214, 0224, 0236, 0243, 0244, 0246, 0249, 0257, 0258, 0297, 0302, 502068, 502095, 502097, 502102, 502109, 502120, 502124.
		Used on type Nos. 0153, 0204, 0213, 0218.	332	92284	Nut			
306	221005	Shield—Cylinder	333	296834	Armature Assembly			
307	93163	Screw—Cylinder Shield Mounting Sem		Note:	297320 Armature Assy. Used on type Nos. 0243, 0244, 502136, 502137.			
308	220824	Cover—Cylinder Head	334	93381	Screw—Armature Mounting Sem			
	Note:	221153 Cover—Cyl. Head Used on type Nos. 0070, 0246, 0282, 502029, 502053, 502096, 502106.	335	93381	Screw—Armature Mounting Sem			
309	296122	Motor—Electric Starter (12 volt) (Electric Auto-Lite No. Med 4001) For Service on these motors see your nearest "Authorized Auto-Lite Service Station".	336	294735	Cable—Ignition This group of ignition cables including Part 294735 is used on en- gines when cable is not sealed in ignition coil.	381	91419	Screw—Cap, Hex. Hd. — 1/4-20 x 5/8"
				Note:	296010 Cable—Ignition Used on type No. 502053.	382	92666	Screw—Cap, Hex. Hd. — 1/4-20 x 1/2"
					296236 Cable—Ignition Used on type Nos. 502029, 502055.	383	89838	Wrench—Spark Plug
310	93268	Bolt—Case				384	62899	Washer—Thermostat
317	296013	Bracket—Starter	337	29693	Plug—Spark	401	211009	Spacer—Carb. Elbow (Used only on engines equipped with automatic choke)
320	297162	Pulley—Idler		Note:	293918 Plug—Spark Used on type Nos. 0185, 0186, 0195, 0225, 0237, 0247, 0253, 0268, 0299, 502031, 502061, 502062.	411	93448	Plug—Oil Level Hole
321	210961	Pulley—Electric Starter					Note:	91249 Plug—Oil Level Hole Used on type No. 502055.
321A	210899	Pulley—Electric Starter	338	29806	Gasket—Spark Plug	413	230581	Nut—Starter Mounting
322	90931	Screw—Cap, Hex Hd. — 1/4-20 x 2-1/4"	339	29667	Breaker Assy.—Ignition	474	296436	Armature—Flywheel Gen.
	Note:	92636 Screw—Cap, Hex. Hd. —1/4-20 x 2"	340	26018	Spring—Breaker Arm	475	296562	Rectifier
		Used on type Nos. 502012, 502017, 502022, 502033, 502057, 502068, 502075, 502095, 502097, 502102, 502109, 502120, 502124.	342	65704	Plunger—Breaker Point	477	67538	Sleeving—Wire
323	67318	Belt—Vee	343	29861	Condenser	478	296367	Plate—Generator Mtg.
323A	68588	Belt—Vee (Used after Serial No. 6503171)	344	93370	Screw—Condenser Mounting Sem	480	93163	Screw—Support Plate and Bracket Mounting Sem
	Note:	66828 Belt—Vee Used before Serial No. 6503181.	345	221046	Cover—Breaker Point		Note:	93171 Screw—Support Plate Mounting Sem Used on type Nos. 0202, 0262, 502028, 502036, 502041, 502931.
		67708 Belt—Vee Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0204, 0213, 0214, 0224, 0236, 0243, 0244, 0246, 0249, 0257, 0258, 0297, 0302, 502068, 502095, 502097, 502102, 502109, 502120, 502124.	346	93014	Screw—Breaker Point Cover Mounting Sem	481	230582	Spacer—Armature Mtg.
324	221067	Screen—Electric Starter	347	221808	Switch—Stop	482	93234	Screw—Armature Mounting Sem
325	221400	Pulley—Rope Starter		Note:	293739 Switch—Stop Used on type No. 0291.	483	296266	Capacitor (Condenser)
326	92272	Screw—Cap, Hex. Hd. — 5/16-18 x 3/4"	348	67118	Block—Stop Switch	484	93166	Screw—Self Tapping, Hex. Hd., Sem
			349	221077	Blade—Switch	485	296437	Post Assembly—Fuse
			350	221078	Clamp—Switch Blade	486	67135	Fuse—3Ag—1-1/2 Amps.
			351	93218	Screw—Stop Switch	487	296347	Cap—Fuse Holder
			352	66068	Washer—Insulating	488	296579	Block Assembly—Fuse
			353	92791	Washer—Lock— Shakeproof	489	93237	Screw—Fuse Block Mounting Sem
			354	90576	Nut—Hex. —8-32	490	67125	Fuse—3Ag—7-1/2 Amps.
			355	66554	Collar—Insulating	491	221241	Support—Charger Mtg.
			356	295413	Wire—Ground	492	296028	Starter—Generator (12 volt) (Delco-Remy No. 1101968 and Pulley— Delco-Remy No. 1949358)
			357	91540	Key—Pulley			
			358	295970	Gasket Set			
			362	291630	Shield—Spark Plug (with stop switch)			
				Note:	66538 Elbow—Spark Plug Used on type Nos. 0142, 0152, 0153, 0158, 0175, 0178, 0202, 0204, 0210,			

142300 to 142457

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	Note:	297423 Starter—Generator (Delco-Remy No. 1101990) Uses: 221703 Fan (Delco-Remy No. 1944437) 296182 Pulley (Delco-Remy No. 1943222) Used on type No. 0218. For service on Starter—Generator and Voltage Regulator see your nearest "Authorized Delco-Remy Service Station of United Motors".	514	91700	Nut—Hex. —1/4-20	590	93226	Screw—Breaker Mounting
			517	295423	Pulley—Rope Starter	600	270055	Spacer—Air Cleaner Used only with Rectangular Foam Type Air Cleaner.
			518	69932	Rope—Starter			
			521	297973	Shielding—Ignition Cable Used on ignition cables molded into coil.	605	298758	Bracket—Guard Used after Serial No. 6503171.
			523	295940	Cap Assy.—Oil Filler		Note:	297170 Bracket—Guard Used before Serial No. 6503181.
				Note:	69345 Cap Assy.—Oil Filler Used on type No. 0312.			297171 Bracket—Guard (Lower)
					295923 Cap Assy.—Oil Filler Used on type Nos. 0139, 502129.			297187 Bracket—Guard (Upper)
			524	65304	Gasket—Oil Filler			Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0204, 0213, 0214, 0224, 0236, 0243, 0244, 0249, 0257, 0258, 0297, 0302, 502068, 502095, 502097, 502102, 502109, 502120, 502124.
493	211112	Bracket—Starter	525	230553	Pipe—Oil Filler			Uses: 91439 Screw—Cap Hex. Hd. — 1/4-20 x 3/8" to mount Guard Bracket No. 297171 to Blower Housing (2 used)
497	91203	Screw—Cap, Hex. Hd. — 5/16-18 x 1-3/4"		Note:	230553 Pipe—Oil Filler 230537 Adaptor—Oil Filler Pipe 91847 Screw—Adaptor Pipe Used on type No. 502129.	606	221445	Strap—Adjusting
500	91325	Washer—Plain					Note:	221443 Strap—Adjusting Used on type Nos. 0131, 0141, 0143, 0153, 0182, 0197, 0204, 0213, 0214, 0218, 0224, 0236, 0244, 0246, 0249, 0257, 0258, 502068, 502075, 502095, 502097, 502102, 502109, 502120, 502124.
501	295924	Regulator—Voltage (Delco-Remy No. 1118988)	535	270209	Element—Air Cleaner (Round Foam Type) Used after Serial No. 423825.	608	295001	Starter Assy.—Rewind
	Note:	296180 Regulator—Voltage (Delco-Remy No. 1119165) Used on type No. 0218.		Note:	27987 Element—Air Cleaner (Rectangular Foam Type) Used before Serial No. 423826 on type Nos. 0055, 0146, 0169, 0179, 0180, 0194, 0208, 0209, 0216, 0219, 0226, 0236, 0248, 0255, 0259, 502034, 502038, 502058, 502059, 502066, 502088, 502115, 502128, 502134.		Note:	298340 Starter Assy.—Rewind Used on type Nos. 0055, 0145, 0255, 0266.
		297196 Regulator—Voltage (Delco-Remy No. 1119577) Used on type No. 502057.				610	93337	Pin—Thermostat Shaft
		Uses: 297197 Clamp (Regulator to Gen.)	536	298681	Cleaner Assy.—Air (Round Foam Type) Used after Serial No. 423825.	621	297472	Switch—Stop
		297199 Wire—Lead (2) (Regulator to Gen.)		Note:	297036 Cleaner Assy.—Air (Rectangular Foam Type) Used before Serial No. 423826 on type Nos. 0055, 0146, 0169, 0179, 0180, 0194, 0208, 0209, 0216, 0219, 0226, 0236, 0248, 0255, 0259, 502034, 502038, 502058, 502059, 502066, 502088, 502115, 502128, 502134.	627	221568	Bracket—Stop Switch
502	93107	Screw—Sem				642	221634	Cover—Air Cleaner
503	221205	Strap—Starter (long)				643	298522	Screen—Air Cleaner
504	221206	Strap—Starter (short)				655	221014	Anchor—Spring
505	92278	Nut—Hex. —1/4-20				656	260672	Spring—Idle Arm
506	90072	Screw—Machine, Rd. Hd. —8-32 x 5/8"						
507	66895	Insulator						
508	93294	Screw—Blower Housing Mounting Sem						
512	296560	Armature and Wiring Assembly						
513	296567	Clutch Assembly — Electric Starter						